 


 
 


EcoFlow stop gates and return stops

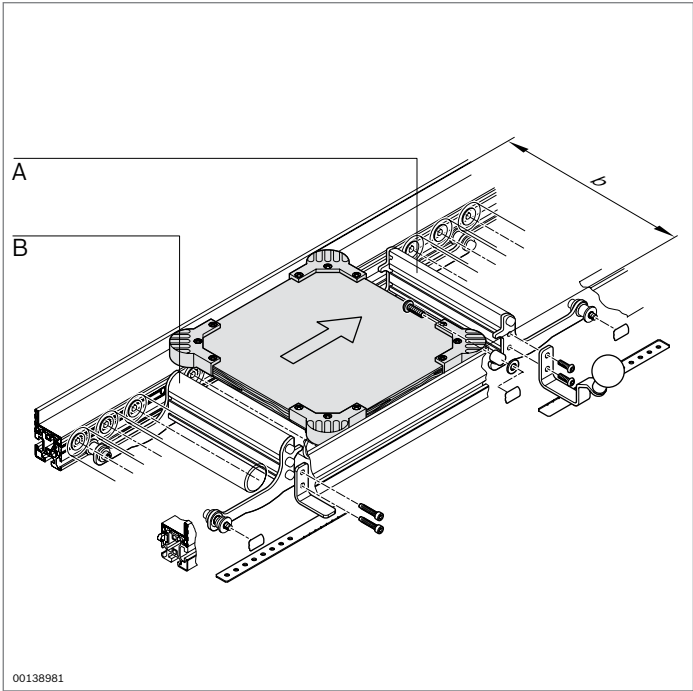

- Stop gate and return stop for positioning workpiece pallets or containers
- At the planning stage remember to leave sufficient leg room. The stop gate and return stop extend downwards by an additional 45 mm
- We recommend using a workpiece pallet with corner pieces (see page 141) to provide a defined stopping surface.

Scope of delivery: includes fastening material

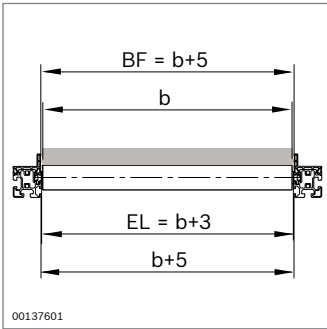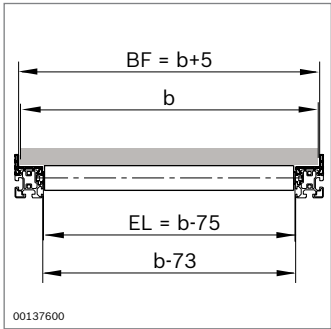

	EL (mm)	No.
A Stop gate	105 ... 1005	3 842 995 007/EL
	225	3 842 537 894
	325	3 842 537 895
	425	3 842 537 896
	525	3 842 537 897
B Return stop	105 ... 1005	3 842 995 017/EL
	225	3 842 537 898
	325	3 842 537 899
	425	3 842 537 900
	525	3 842 537 901